

DATA SHEET– 2-Seater Sofa ROK-CL02



The ROK-CL02 sofa is a rotationally molded furniture solution designed for secure healthcare and psychiatric environments. Manufactured in France, its robust one-piece construction, resistant to impacts and fluids, ensures safety, stability, and durability for intensive daily use while minimizing the risk of tipping.

Thanks to its reassuring design and enhanced stability, the ROK-CL02 sofa meets the demanding requirements of high-risk environments and secure communal spaces. Easy to clean, compatible with hospital disinfection protocols, and 100% recyclable, it also offers excellent impact resistance, an optional ballast system, and a lifetime warranty for optimal durability and a reduced total cost of ownership.

■ **Seat height** 16,9 / 17,2 po

■ **Overall height** 31,7 po

■ **Width** 50,9 po

■ **Depth** 25,5 po

■ **Weight (without ballast)** 36 kg


■ **Tested static load** 600 kg

■ **Options** Ballast up to 100 kg –
Fixed comfort pads –
Floor fixing brackets



*Lifetime warranty

A 
closer look

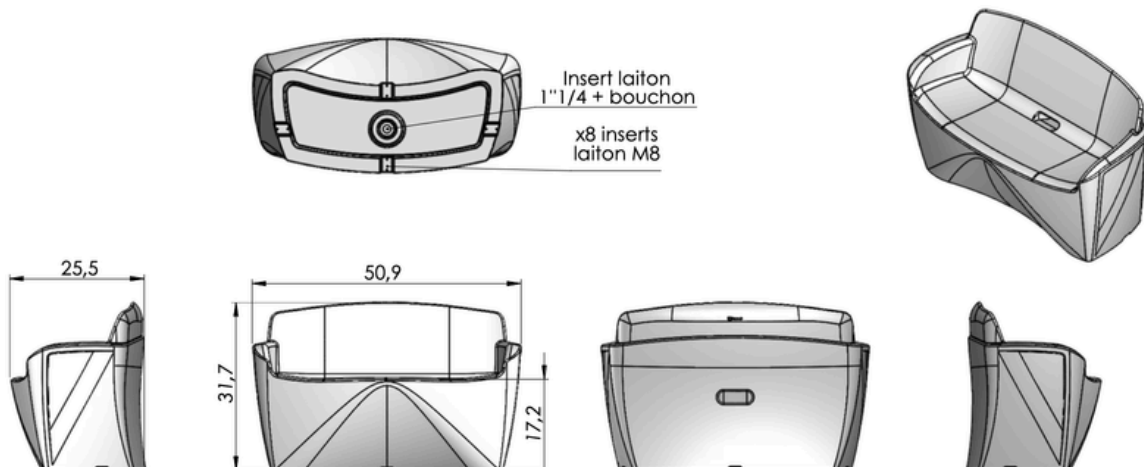



Cleaning Protocol

- High-Density Polyethylene (HDPE) structure
- Non-porous, 100% waterproof and recyclable surface
- Compatible with hospital disinfection protocols
- Resistant to common disinfectants, alcohols, and hospital detergents
- Pre-cleaning: remove visible soiling, then rinse thoroughly with clean water
- Routine cleaning with a neutral or mildly alkaline detergent
- Apply using a microfiber cloth or a soft non-abrasive sponge
- Thorough rinsing after cleaning is recommended
- Compatible with:
 - Diluted bleach solution 0.1–0.5%
 - Ethyl or isopropyl alcohol ≤ 70%
 - Hydrogen peroxide ≤ 30%
 - EN 14885-certified hospital disinfectants
- Recommended contact time: 5 to 15 minutes depending on the product used
- Rinsing is mandatory after the use of chlorine-based or peroxide-based products
- Air dry or wipe dry with a clean, lint-free cloth
- Do not use chlorinated solvents, hydrocarbons, abrasive products, or concentrated acids
- Daily cleaning recommended in healthcare environments
- Disinfection after each patient in psychiatric or secure care environments
- Regular visual inspection of the furniture's integrity after cleaning and maintenance procedures recommended



Standards and compliance

- **ISO 7170** – Furniture strength and durability
- **REACH (EC No. 1907/2006)** – Regulation on chemicals and chemical substances
- **ISO 846:2019** – Resistance to fungal and bacterial growth
- **UL 94 HB** – Flammability testing of plastic materials
- Manufactured under **MASE certification**
- **ISO 9001** certification process underway



Click here
to learn more